

Fence panels measuring guide – For slopes



AUSTRALIANA
GATES & FENCING

**This guide is only applicable if ground is rising along the opening


A. How to measure fence panels:

- Measure according to the final position of the fence
- Subtract post sizes from your measurement
- Choose the width and quantity of panels required
- Always measure in between opposite faces of existing or proposed walls (A)
- Wide openings will need extra posts to support panels
- On sloped areas, panels will need to be stepped to follow the floor and reduce the gap created under the panels. One panel here will be too long and will also result in a 200mm gap on the left side. Steeper slopes will require more panels than shallow slopes
- Try spacing panels equally and allow for posts in between panels (Post Gap)



Tips:

2 panels have 3 posts
3 panels have 4 posts
etc...
And when panels change direction, a post is needed.

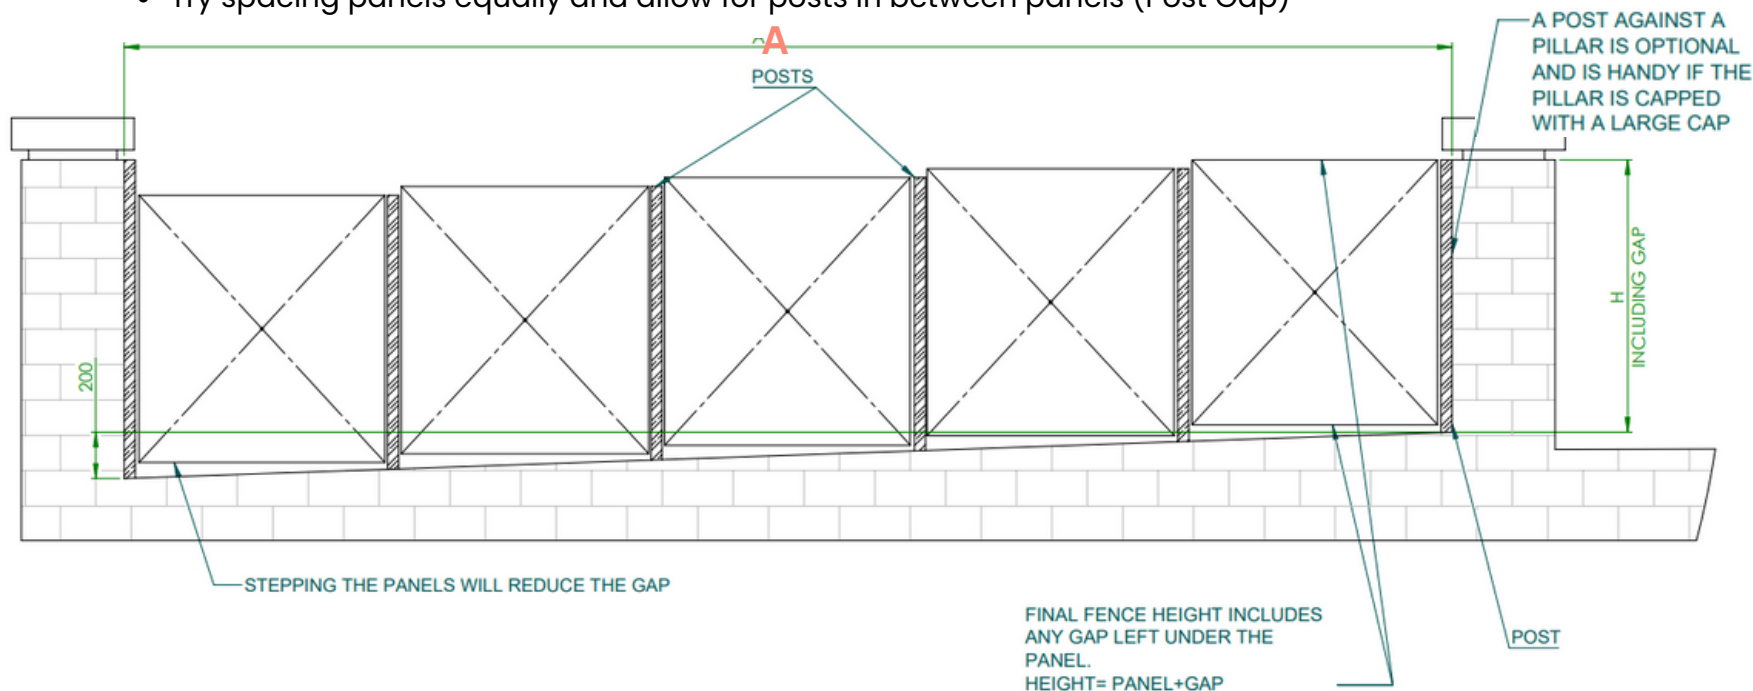

Need help?

Talk to us: info@australianagates.com.au / 0413633776 / australianagates.com.au

This is a guide only. We will not be responsible or liable for any misinterpretation, incorrect calculations and measurements taken.