

Post installation tips


Simple & handy.



AUSTRALIANA
GATES & FENCING


Concreted in posts

- Posts should be concreted in ground between 1000 – 1200mm deep
- Size of post hole should be approx. 500mm x 500mm wide
- If you are not confident concreting a post, ask for professional advice and assistance
- Freestanding gate posts must be strong enough to hold the weight of the gate for a long period of time.
- For our gates, we recommend using post sizes as shown below – SHS aluminium post or equivalent in steel.
- Have in mind that concreted in posts will eventually move with the movement of the land. Even though small, it happens.
- Leveling and aligning the posts adequately will improve their functionality and maintain aesthetics.
- It is likely you will need to cut down the post height to meet gate height.
- We don't recommend using rapid set!

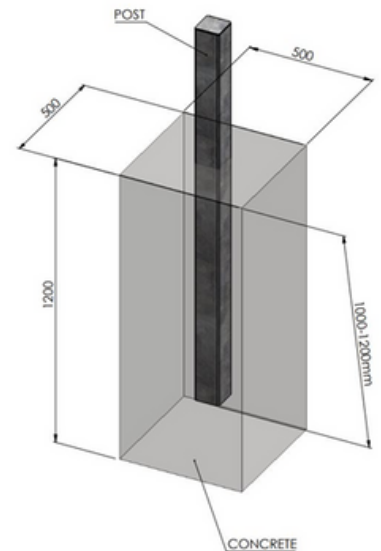

Bolted on posts

- Make sure you use adequate fasteners for the substrate you are fixing the post onto (brickwork, blockwork, timber, metal, etc).
- Consider gate weight before choosing fastener to meet adequate weight capacity.
- Leveling and aligning the posts adequately will improve their functionality and maintain aesthetics.
- Our posts have 3 x 25mm holes – if more fixing is necessary, drill extra holes to secure the post as desired.

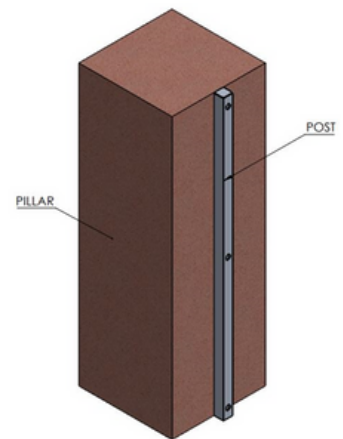

Concreted in posts

(Size options)

100x100x6mm aluminium
(for up to 3500w x 1800h gates)

75x75x6mm aluminium
(only for under 1500w x 1200h gates)

Bolted on posts

(Size options)

100x100x3mm aluminium
100x100x6mm aluminium
(Recommended)

75x75x3mm aluminium
75x75x6mm aluminium
(Recommended)

Need help?

Talk to us: info@australianagates.com.au / 0413633776 / australianagates.com.au